

PROJECT NAME

MAELSTROM

BASED ON

Darkglass® Microtubes® B3K

EFFECT TYPE

Bass overdrive / distortion

BUILD DIFFICULTY

■■■□□ Intermediate

DOCUMENT VERSION

1.0.3 (2024-09-11)

qion
DIY GUITAR EFFECTS

PROJECT SUMMARY

A CMOS-flavored bass overdrive with tones spanning across decades, from vintage warmth to modern bite and aggression.



IMPORTANT NOTE

This documentation is for the **kit** version of the project. If you purchased the PCB by itself, please use the [PCB-only version](#) of the documentation instead. The circuit is the same, but the instructions are completely different due to the specialized parts and assembly methods used in the kit.

TABLE OF CONTENTS

1	Project Overview
2	Table of Contents
3	Introduction
4	Packing List
5	Packing List (Cont.)
6	Tools Needed
7	Component Identification
8	Hardware Identification
9	Overview
10	Resistors
11	Diodes
12	Sockets & ICs
13	Capacitors (Non-Polarized)
14	JFETs
15	Wire Headers
16	Capacitors (Polarized)
17	Footswitch PCB
18	Input/Output PCB
19	Enclosure Layout: Panel Mounts
20	Enclosure Layout: Panel Mounts (Cont.)
21	Enclosure Layout: Main & Footswitch PCBs
22	Enclosure Layout: Input/Output PCB
23	Final Testing & Assembly
24	Schematic
25	Full Parts List
26	Troubleshooting Information
27	Support & Resale Terms
28	Legal Information & Document Revisions

INTRODUCTION

If this is your first pedal, welcome to the hobby and thank you for choosing Aion FX. You've just joined a community of over 100,000 people around the world with a passion for building homemade noise machines using obsolete electronics technology, and we're glad to have you!

If you've done this before, it's great to see you again and we're confident you'll find this build experience an enjoyable one.

Aion FX kits are designed to empower anyone to build a high-quality pedal, no matter the skill level. The pedalbuilding hobby has traditionally had a steep learning curve, but don't be overwhelmed—we've done all the hard work for you. All you need to do is follow these instructions and you'll be on your way to transforming your tone.

There are a few things to go over before you get started.

- **You're going to have to get your hands dirty**—there's no way around it. Nothing here comes preassembled, and you'll have to learn the skills to put it all together. This document will walk you through everything you need, but be prepared to learn a few things along the way.
- **This will take time.** Plan on about two hours start to finish. It may take even longer if it's your first time building. Don't rush it. If you find yourself getting frustrated or overwhelmed, take a break and come back in a couple of hours or the next day.
- **No direct technical support is offered.** There are several DIY forums and Facebook groups with thousands of members who enjoy troubleshooting and teaching. But please be sensitive to the fact that the staff at Aion FX is minimal, and every minute spent helping individuals in private is time that can't be spent on new project development.
- **There is no implied guarantee of a final product.** Aion FX provides the ingredients and the recipe, but you are responsible for putting everything together to make it work. We've tried to make the process as clear and accessible as possible, but it must be expressly stated that purchasing the kit is not a guarantee that you will end up with a working pedal.

It's recommended to read through all of the instructions before you start, particularly if you've never built a pedal before. If you familiarize yourself with the entire process ahead of time and you know what the goal looks like, each step will make more sense.

Now, on to the fun stuff!

PACKING LIST

This is a list of all the parts that are included with the kit, grouped by value. For a list of all the parts based on their PCB part numbers, please see page 24.

If you find that any parts are missing or damaged, please fill out the [Missing Parts](#) form.

Film Capacitors

NAME	QTY
1n	2
2n2	3
4n7	1
22n (0.022)	6
100n (0.1 or "µ1J100")	2
220n (0.22)	2
1uF	2

Electrolytic Capacitors

NAME	QTY
47uF	1
100uF	1
220uF	1

MLCC Capacitors

NAME	QTY
22pF (marked "220")	2
220pF (marked "221")	1
680pF (marked "681")	1
100n (marked "104")	1

Transistors

NAME	QTY
J201 with PCB adapter	2

Resistors

NAME	QTY
100R	1
1k	1
3k3	2
6k8	2
10k	6
22k	3
33k	1
47k	1
100k	3
200k	1
330k	1
470k	3
1M	7

Diodes

NAME	QTY
1N5817	1
1N914	2

ICs

NAME	QTY
TL072	3
CD4049UBE	1
8-pin socket	5

PACKING LIST (CONT.)

Potentiometers

NAME	QTY
100kA	1
100kB	2
100kC	1
Dust cover	4
Knob	4
Mounting nut, potentiometer, 0.44"	4
Lock washer, potentiometer, 0.5"	4
Outer washer, potentiometer, 0.475"	4

Other

NAME	QTY
LED bezel	1
LED, blue	1
DC jack	1
Input/output jack	2
Mounting nut, jack, 0.54"	4
Outer washer, jack, 0.6"	2
Lock washer, jack, 0.5" (thin)	2
Enclosure	1
Enclosure screws	4
PCB, main circuit	1
PCB, footswitch	1
PCB, input/output/DC	1

Switches

NAME	QTY
Toggle switch, SPDT on-off-on	2
Mounting nut, toggle switch, 0.36"	2
Lock washer, toggle switch, 0.4"	2
Dress nut, toggle switch, 0.375"	2
Stomp switch, 3PDT	1
Mounting nut, stomp switch, 0.6"	2
Lock washer, stomp switch, 0.6"	1
Dress nut, stomp switch, 0.77"	1

Wiring

NAME	QTY
3-strand wire assembly, 70mm	2
4-strand wire assembly, 122mm	1
3-pin wire assembly header	2
4-pin wire assembly header	1

TOOLS NEEDED



SOLDERING IRON

Temperature-adjustable is recommended. The optimum soldering temperature is 700-725° F (371-385° C) for leaded solder, or 750° F (400° C) for lead-free.




SOLDER

Preferably 63/37 or 60/40 leaded solder. Lead-free is more difficult to use, so if that's the only type you can get, it's best to watch tutorials that are specific to lead-free solder.




DIGITAL MULTIMETER (DMM)

Most cheap ones in the \$10-30 range are fine for what we're doing. Make sure it has audible continuity testing (i.e. it beeps at the lowest resistance) and transistor hFE measurement.

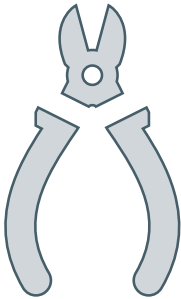


WIRE SNIPPERS

Also called nippers or wire cutters. The Hakko CHP-170 is the best you can get for less than \$10.

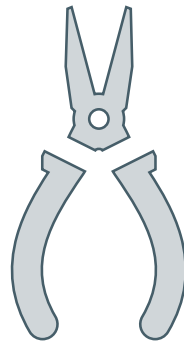

FLAT-NOSE PLIERS

Many general-purpose uses, but particularly tightening the nuts of pots, switches and jacks. Quicker than changing out sockets on a ratchet.

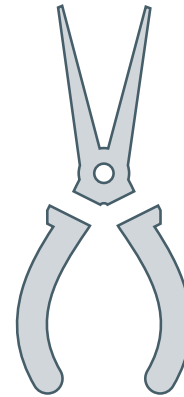


NEEDLE-NOSE PLIERS

These are used for bending leads on components and other general uses. Use the smaller type with a tip that's approximately 0.05" (1.25mm) wide.



SCREWDRIVER (PHILLIPS)

Used for the enclosure screws. Get a powered driver if you'll be building a lot of pedals!

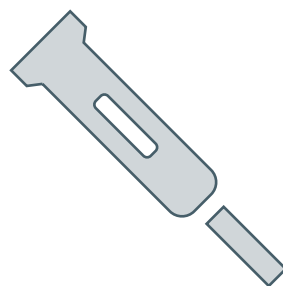

FLAT SCREWDRIVER (SMALL)

This is used for tightening the set screws on the knobs. The tip should be no more than 0.1" (2.5mm) wide.




RUBBER BAND

Yes, a plain old rubber band. This is used to tighten the dress nut to avoid scratching or denting it (which can happen with metal tools).


COMPONENT IDENTIFICATION

If you've never built a pedal before, you'll need to know what all the components are. These are shown actual size. (Not all of these types of components may be part of this kit.)


RESISTOR

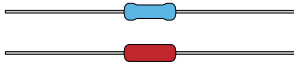

TRIM POTENTIOMETER

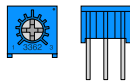


LED



SILICON DIODE



GERMANIUM DIODE

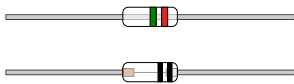

These are very fragile, so be careful when handling them.

RECTIFIER DIODE



Some Schottky diodes also look like this.


SCHOTTKY DIODE



ZENER DIODE



FILM CAPACITOR

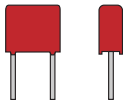


Not polarized. Color may vary by brand and type.

ELECTROLYTIC CAPACITOR



Polarized. The negative side is marked.

MLCC



Not polarized. MLCC stands for "multi-layer ceramic capacitor."

TANTALUM CAPACITOR




Polarized. The positive side is marked.

IC OR OP-AMP




Charge pumps and delay chips also look like this. They may have more than 8 legs.

IC SOCKET

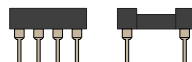

TRANSISTOR OR JFET



Some voltage regulators also look like this.

TRANSISTOR WITH ADAPTER




The pins will be soldered to the adapter during kit assembly.


WIRE ASSEMBLY



WIRE ASSEMBLY HEADER



DC JACK













LED BEZEL



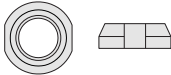
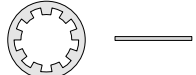






HARDWARE IDENTIFICATION

The hardware comes unassembled, so you'll need to sort & identify each of the pieces. The diagrams below are actual size, so you can set them against the printed page to identify them if needed.

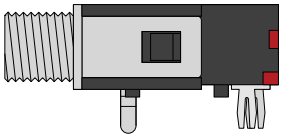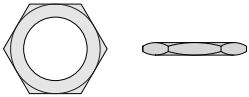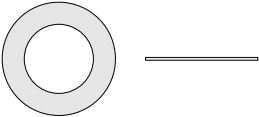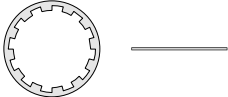I/O JACK 	MOUNTING NUT  DIAMETER: 0.54" / 13.7mm	OUTER WASHER  DIAMETER: 0.6" / 15.2mm	LOCK WASHER  DIAMETER: 0.5" / 12.7mm
--	--	--	--

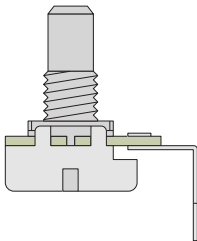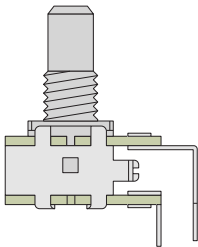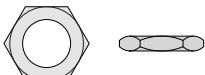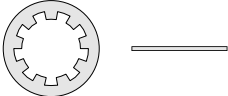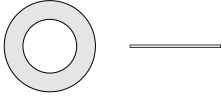POTENTIOMETER (SINGLE) 	POTENTIOMETER (DUAL) 	MOUNTING NUT  DIAMETER: 0.44" / 11.2mm	LOCK WASHER  DIAMETER: 0.5" / 12.7mm
		OUTER WASHER  DIAMETER: 0.475" / 12mm	KNOB 

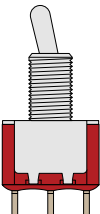TOGGLE SWITCH 	MOUNTING NUT  DIAMETER: 0.36" / 9.1mm	DRESS NUT  DIAMETER: 0.375" / 9.5mm	LOCK WASHER  DIAMETER: 0.4" / 10.1mm
---	---	--	--

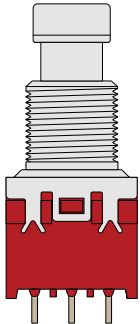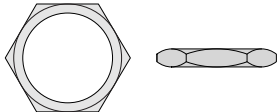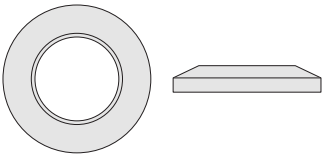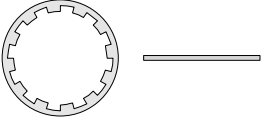FOOTSWITCH 	MOUNTING NUT  DIAMETER: 0.6" / 15.2mm	DRESS NUT  DIAMETER: 0.77" / 19.6mm	LOCK WASHER  DIAMETER: 0.6" / 15.2mm
--	---	--	--

PCB ASSEMBLY OVERVIEW

Now it's time to start building!



Before you begin, separate the PCBs into individual boards and break off the tabs from each using needle-nose or flat-head pliers. You should be left with the three PCBs shown to the right.

The general principle for PCB population is that you want to work in layers from shortest components (i.e. lowest-profile) to tallest so that when the PCB is upside-down, everything is making contact with the work surface and is held in place.

Generally speaking, you should populate the components in this order:

1. Resistors
2. Diodes
3. IC sockets
4. MLCC capacitors
5. Film capacitors
6. Transistors
7. Electrolytic capacitors

Not all of these component types are included in each kit, so skip them if they aren't applicable. Some types of film capacitors are taller than electrolytics, so those can be done last.

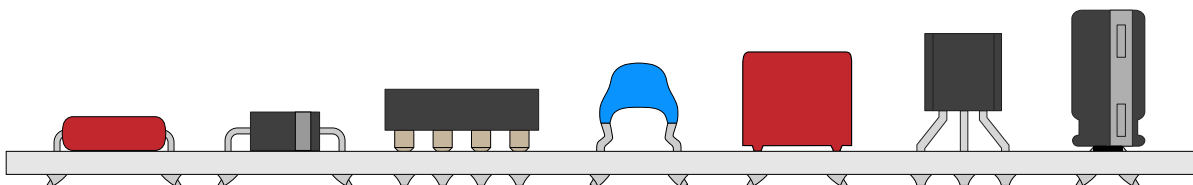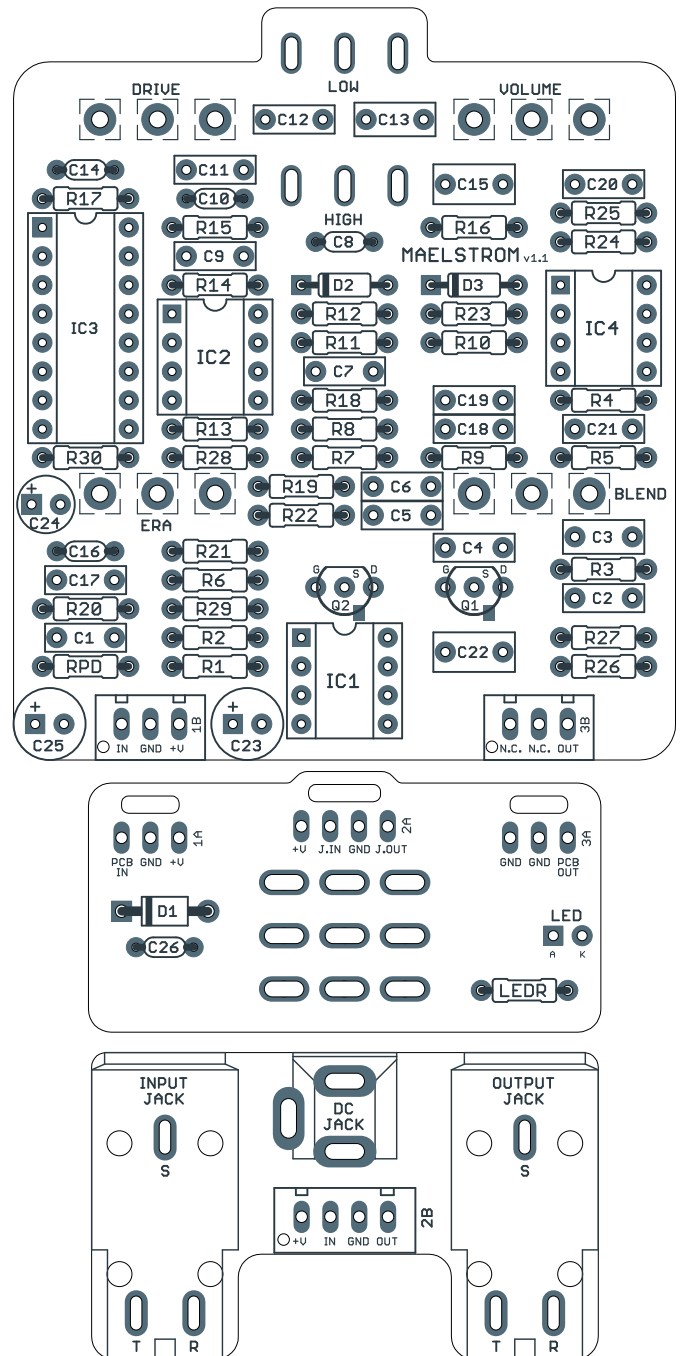


RESISTORS

PART	VALUE
R1	10k
R2	1M
R3	100k
R4	1M
R5	3k3
R6	1M
R7	1M
R8	200k


PART	VALUE
R9	6k8
R10	22k
R11	470k
R12	470k
R13	1M
R14	330k
R15	3k3
R16	6k8

PART	VALUE
R17	470k
R18	10k
R19	1M
R20	100k
R21	33k
R22	10k
R23	22k
R24	22k

PART	VALUE
R25	47k
R26	1k
R27	100k
R28	10k
R29	10k
R30	100R
RPD	1M
LEDR	10k

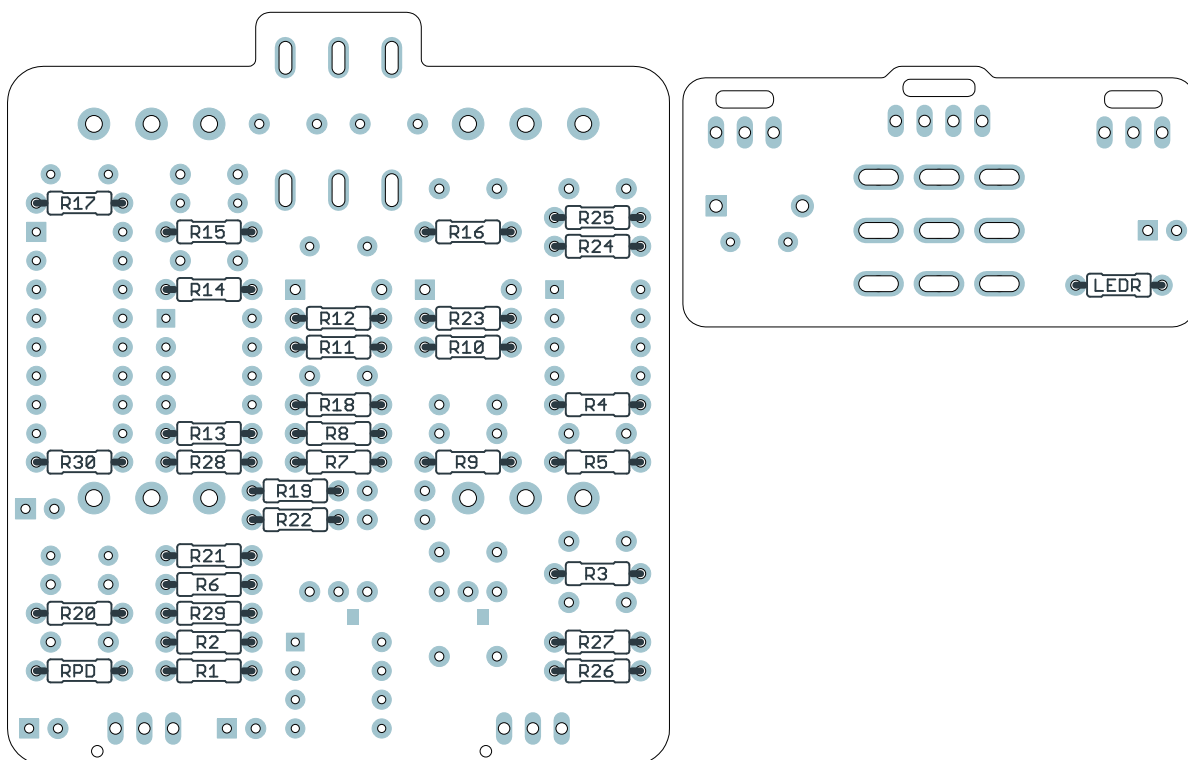


Using the parts list above, populate the resistors by pushing them through the holes and bending the leads outward at an angle to hold them in place. Resistors are not polarized, so they will work in any direction. Turn the board upside-down to keep the components held in place while you solder.

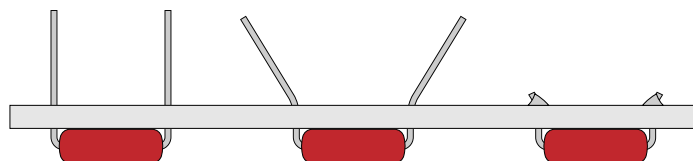

Don't try to do all of the resistors at once. You'll want to stop periodically flip the board and solder everything, then cut the leads using the wire snippers to make room for more.

DIODES

PART	VALUE
D1	1N5817
D2	1N914
D3	1N914

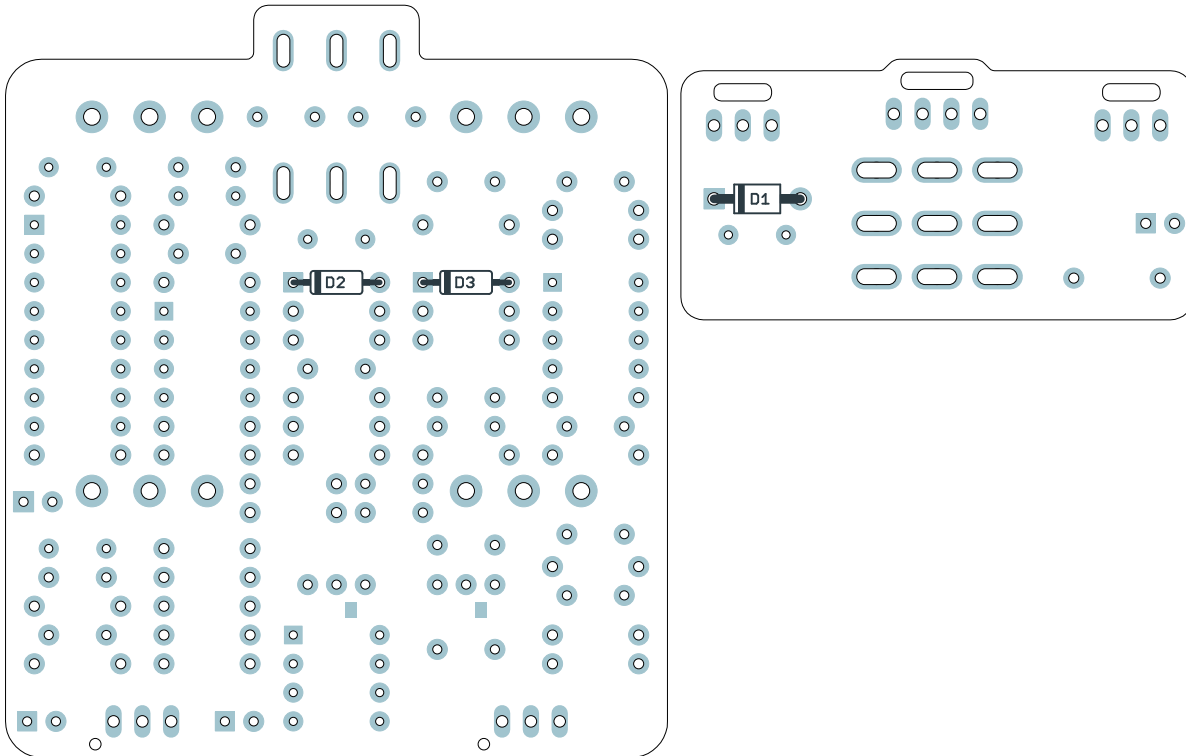

Next, you'll populate the diodes. Diodes are polarized, so make sure to identify the polarity band (which indicates the "cathode", or negative side) and match the band to the footprint on the PCB.

SOCKET & IC

PART	VALUE
IC1	TL072
IC2	TL072
IC3	CD4049UBE
IC4	TL072


Next up are the sockets. You can't bend the leads of the socket as with the other components, so it won't stay in on their own until they are soldered. Flip the PCB over and use gravity to hold it in place.

Note that IC3 has 16 pins, but this kit uses two 8-pin sockets installed as shown in the diagram to the right. There will be five 8-pin sockets in total.



Installing the ICs

Don't insert the ICs into the sockets just yet. We will do this in a later step, after we've finished soldering the tallest components (the polarized capacitors). This information is just listed here for reference.

The legs of the ICs are bent outward slightly during manufacturing, so they'll need to be bent back inward before they can be inserted into the sockets. It's easiest to do this by laying the IC legs against the table and bending the body itself so all four legs on the side are straightened out at once. Then, flip it and do the other side.

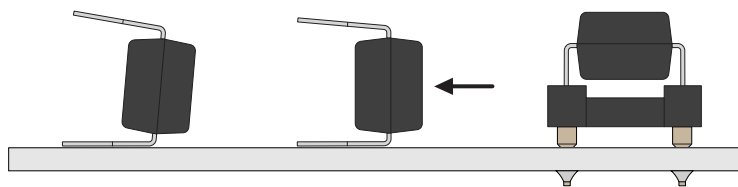

ICs may have two different orientation marks: either a dot in the upper-left or a half-circle notch in the middle of the top side. Some ICs have both marks. This shows which way the IC should be rotated when inserting it into a socket (the socket also has a half-circle notch).

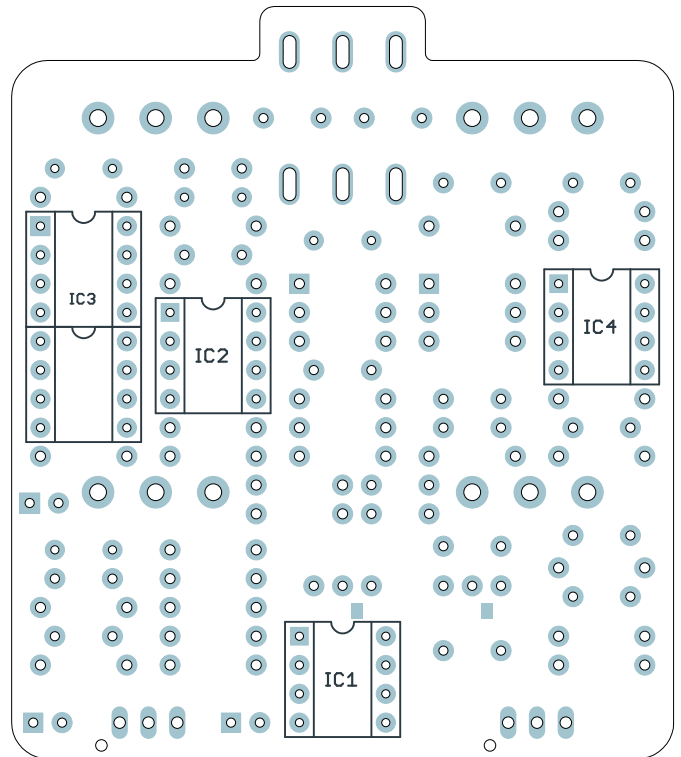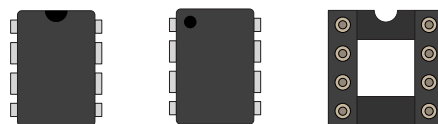


CAPACITORS (NON-POLARIZED)

PART	VALUE
C1	100n (0.1)
C2	1n
C3	220n (0.22)
C4	22n (0.022)
C5	22n (0.022)
C6	22n (0.022)

PART	VALUE
C7	22n (0.022)
C8	220pF MLCC
C9	100n (0.1)
C10	22pF MLCC
C11	4n7
C12	22n (0.022)

PART	VALUE
C13	220n (0.22)
C14	22pF MLCC
C15	1uF
C16	680pF MLCC
C17	22n (0.022)
C18	2n2

PART	VALUE
C19	2n2
C20	2n2
C21	1n
C22	1uF
C26	100n MLCC

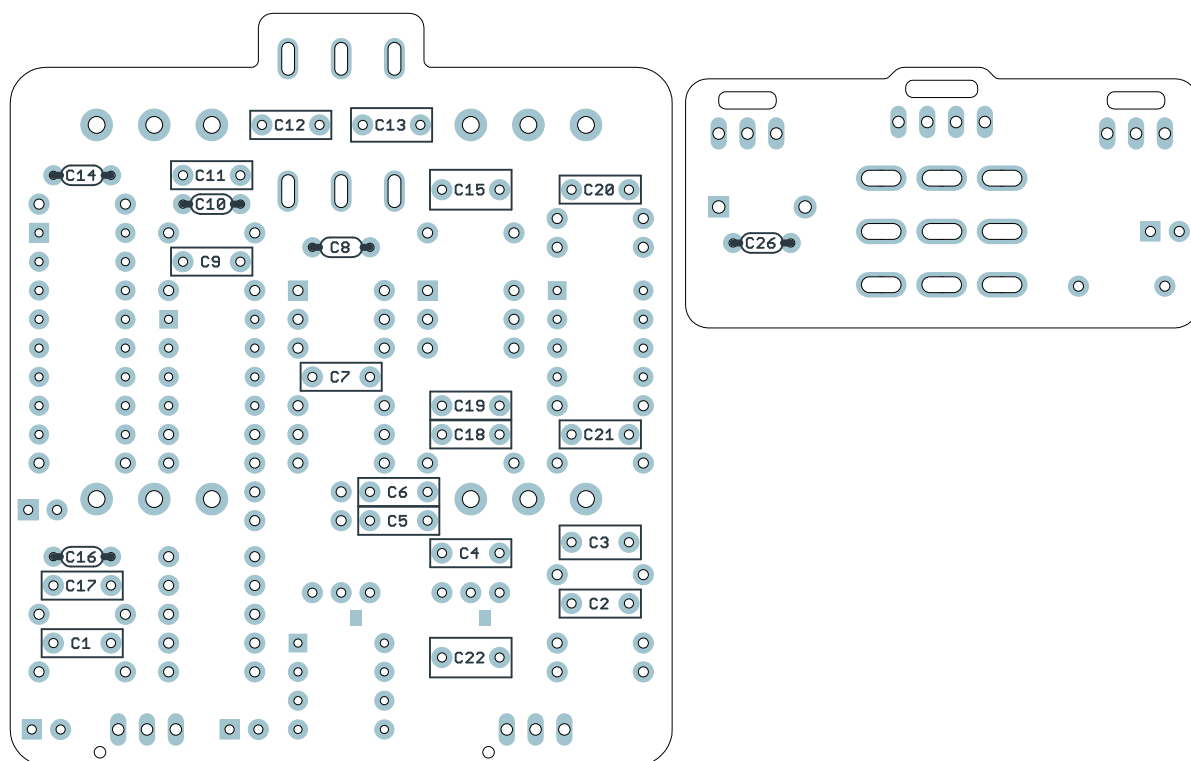

After the sockets come the box film and MLCC capacitors. These are all several different heights, but there aren't as many, so just do them all at once. Bend the leads at an angle to hold them in place.

MLCCs and box capacitors are not polarized, so they will work in any direction, but to keep things neat, it's best to put them all facing the same way.


Note: C2, C11, and C18-21 are usually blue box-film capacitors. For these, the value is printed on the top rather than the side.

C1 and C9 are usually red, but may read “ μ 1J100” on the top rather than the side.

C8, C10, C14, and C16 are blue MLCCs taped to cardboard. The value is written on the cardboard.

C26 (100n MLCC) is always yellow. It can be hard to read the code since it's so small, so it's easier to identify this one by color.

PART	VALUE
Q1	J201
Q2	J201

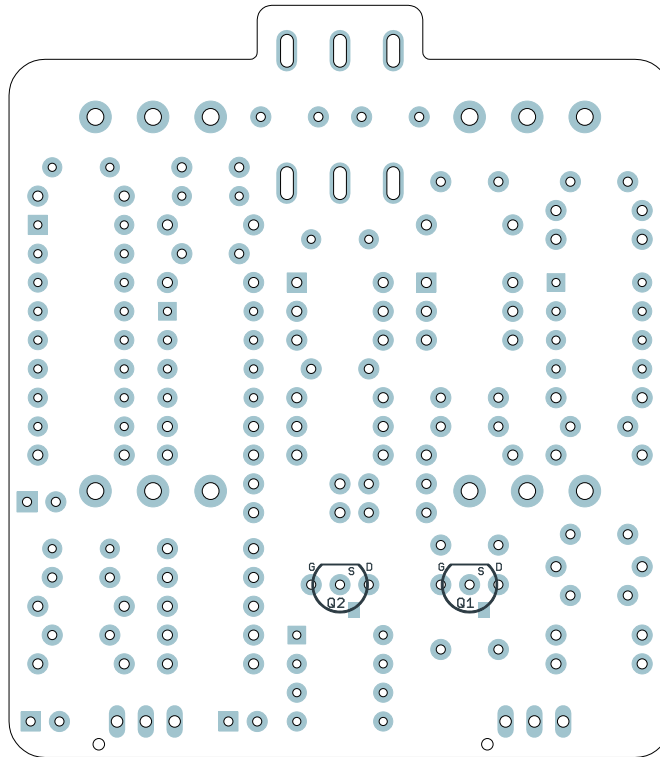


Now we'll do the two JFET transistors. The PCB outline shows through-hole TO-92 outlines, but the through-hole J201 has been discontinued for many years and most of what is available today is either fake or outside the ideal specification.

We use current-production surface-mount JFETs which perform identically to those used in the original B3K pedal. These are mounted to adapter boards so they can be used in through-hole designs such as this one. However, this does require some extra work since the legs must be soldered to the adapter.


STEP 1

Break apart the adapter PCBs (you can just use your fingers for this) and then use pliers to snap off the tabs.

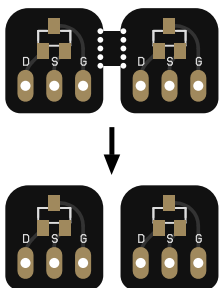


STEP 2

Using wire cutters, cut the pin strip into two sets of three. Separate the top panel from the pin strip by bending it back.

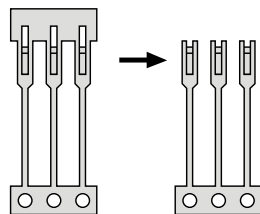


STEP 3

Clip the pins to the adapter, making sure they're centered on the pads and pushed up all the way.

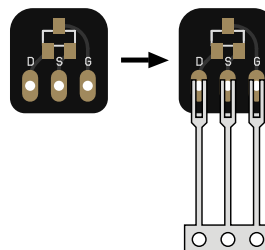

STEP 4


Solder the pins (including the reverse side, if needed). Then, using wire cutters, clip the bottom strip from the pins.

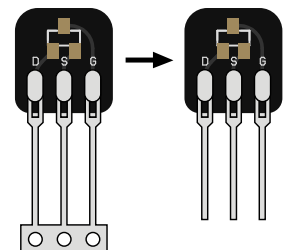

Once the pins are installed, the JFETs can be soldered to the PCB like any other normal component.

Be very careful to line up the D-S-G labels with the markings on the PCB or the effect will not work. The component side of the PCB adapter should face upwards toward the toggle switches.

WIRE HEADERS

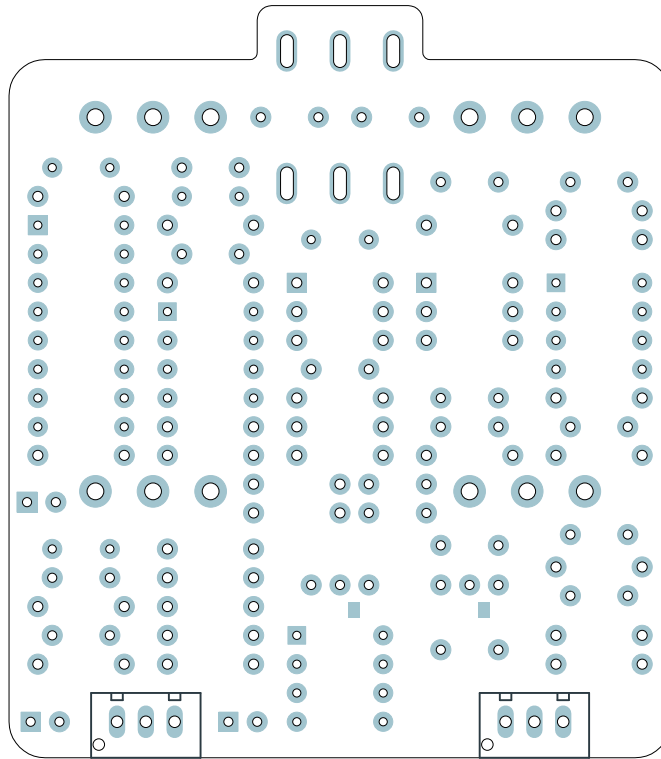


Install the two 3-pin headers (wire connectors) as shown above. These have a polarity pin, so as long as they are pressed all the way down, there's only one possible way to install them. They do fit pretty tightly in the holes, though, so press firmly.

There's also a 4-pin header on the I/O board that we will do in a later step.

CAPACITORS (POLARIZED)

PART	VALUE
C23	100uF electro
C24	47uF electro
C25	220uF electro

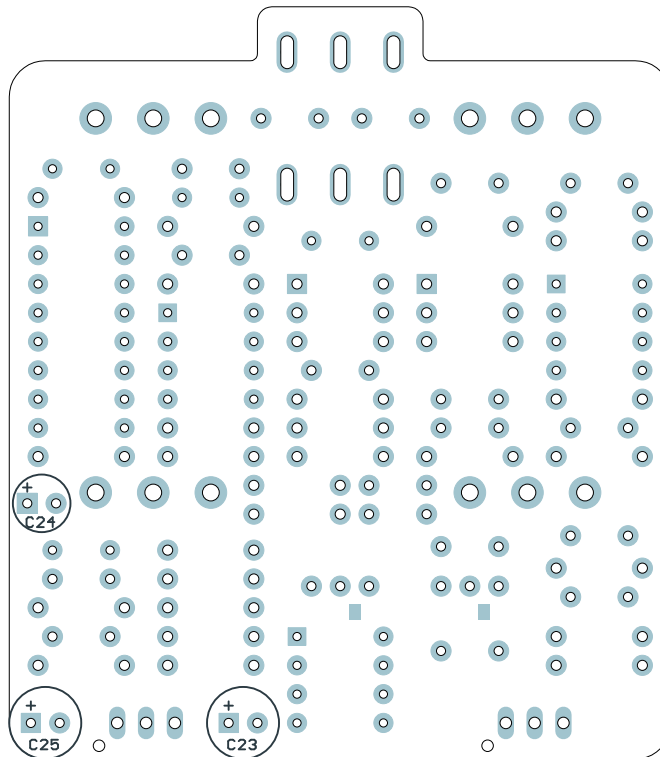

Populate the electrolytic capacitors. These are the tallest components, so we save them for last. They are polarized (i.e. they will only work in one direction), so note the vertical mark that indicates the negative side. The longer leg is positive and fits in the square pad.


These are the last of the on-board components. Now is the time to go back to page 12 and insert the ICs into the sockets.

FOOTSWITCH PCB

PARTS

3-strand wire assembly (2)

4-strand wire assembly

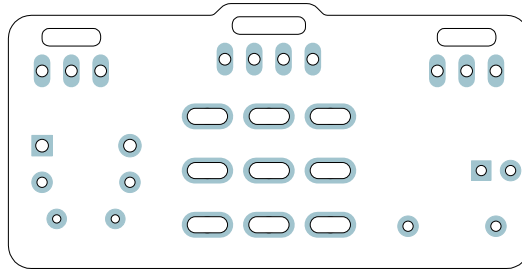


Next, it's time to finish up the footswitch board. You should have done most of the on-board components on this board in a previous step, but if not, go back and do those.

There will be one longer assembly with 4 wires and two shorter ones with 3 wires. The longer one goes in the middle and the shorter ones go on the left and right sides. The wire assemblies should then be soldered to the footswitch board as shown.

STEP 1

First, thread the wire through the strain-relief slots, with the blue side facing outward and the PCB's previously-installed components facing up.


For now, pull it through as far as it can go.

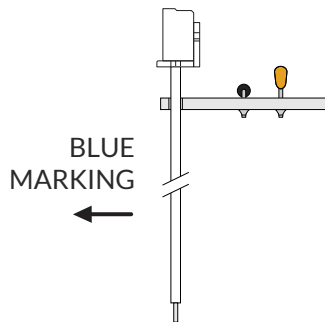

STEP 2


Next, bend the wires back upward and fit the ends of the wires into the solder pads.

On the top side of the PCB, bend the exposed wires backward so it holds the wire in place. Pull the header back up through the slot partway.

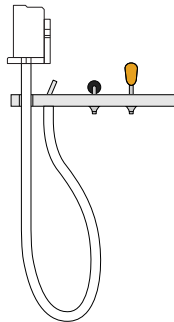

STEP 3

Then, solder the wires from the top. This is the trickiest part of the whole build. You want to solder the pads without touching the iron to the wires themselves and risking burning through the insulation. It helps to use a sharp or narrow tip on the soldering iron.

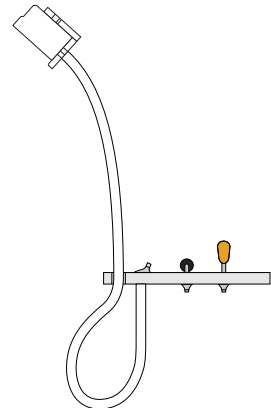

Once all three wire assemblies are soldered, set the footswitch PCB aside. We'll solder the actual footswitch and LED in a later step.


INPUT/OUTPUT PCB

PARTS



Input & output jacks

DC jack

Wire header

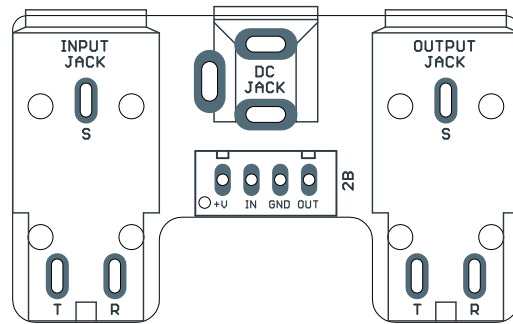


Almost done! Get the two input/output jacks, the DC jack and the wire header and snap them in place. The PCB is designed for them to fit securely, so you can do them all at once before flipping and soldering.

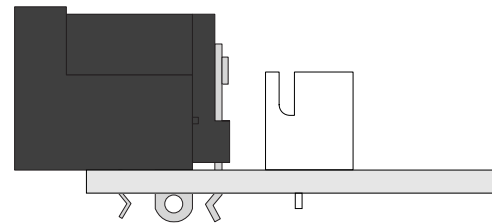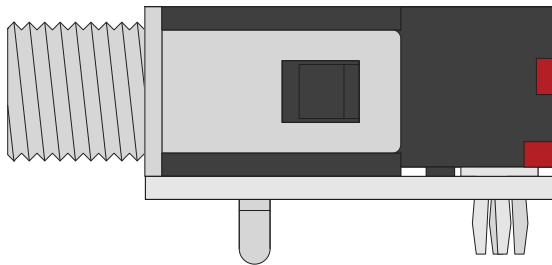


After you've soldered everything, make sure to **snip the leads on the I/O jacks as close as possible to the PCB**. There's not a lot of clearance between the bottom of this board and the top of the main PCB once everything is in place, and you don't want the pins to short against anything on accident.

ENCLOSURE LAYOUT: PANEL MOUNTS

Attach the hardware to the enclosure as shown. (The I/O board is done in a later step.)

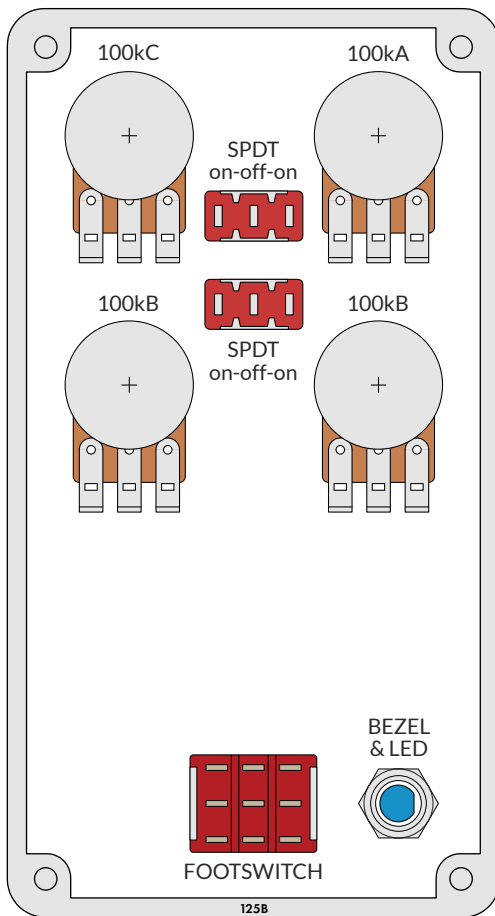

FOOTSWITCH

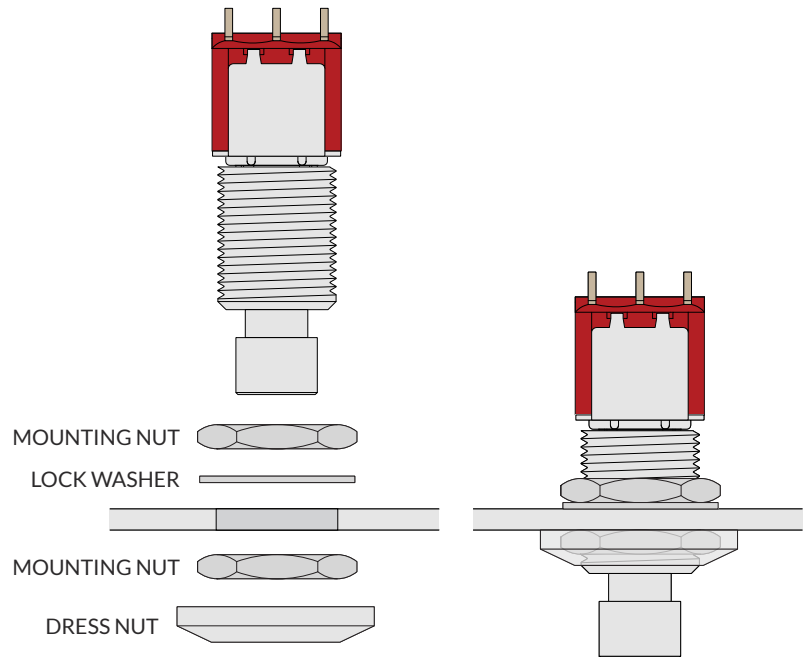

The dress nut fits over the top of the mounting nut and is for aesthetic purposes only. Wrap a rubber band around it to use as a grip when tightening. Do not use metal tools on it or you run the risk of scratching or denting it.

POTENTIOMETERS


Drive: 100kC

Era: 100kB

Blend: 100kB


Volume: 100kA

Era is labeled "Tone" on the enclosure.

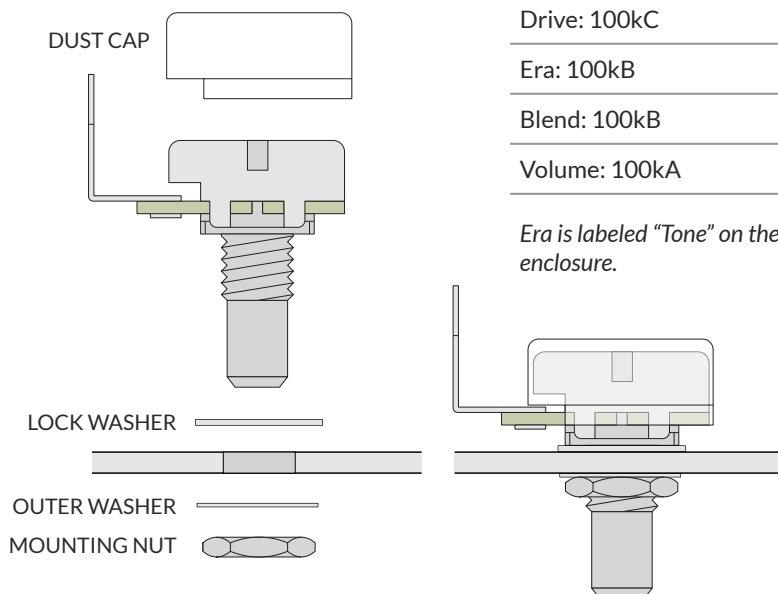


BEZEL & LED

The LED will just sit loosely inside the bezel for now.

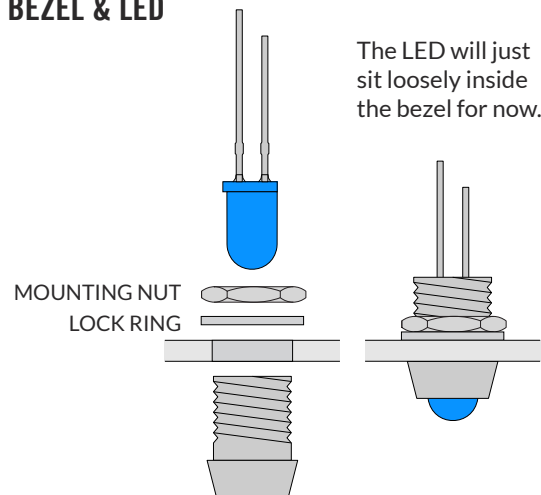


You'll need to hold the bezel in place when tightening the nut. Be aware that the bezel is fairly sharp. Try using a rubber band for grip instead of just pressing your finger against the bottom.

ENCLOSURE LAYOUT: PANEL MOUNTS (CONT.)

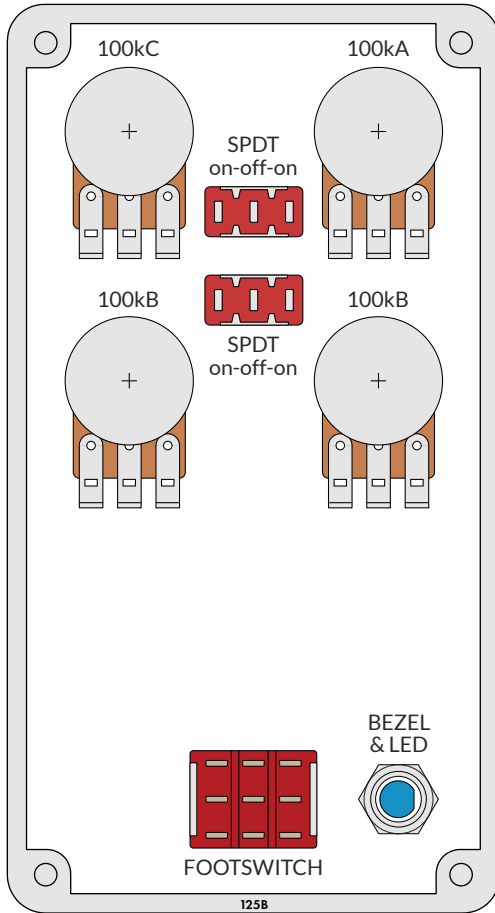


TOGGLE SWITCHES

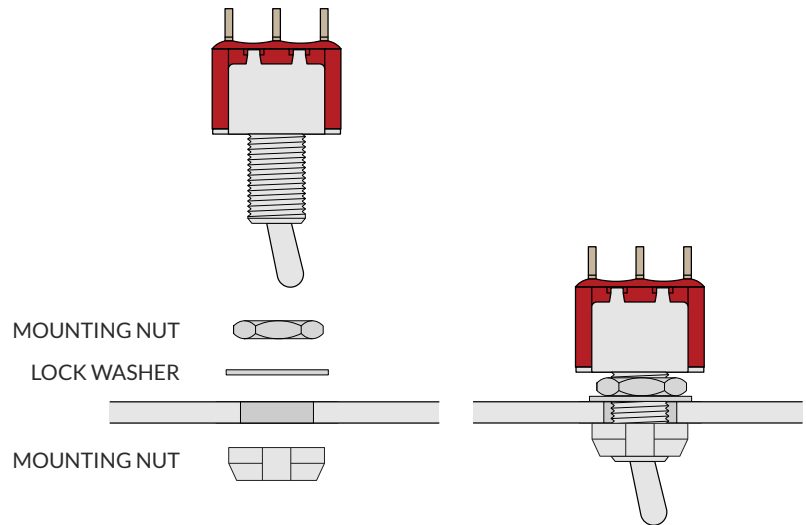

The dress nut acts as a mounting nut, unlike the footswitch dress nut. Use flat-nose pliers on the flat sides of the nut to tighten securely.

ENCLOSURE LAYOUT: MAIN & FOOTSWITCH PCBs

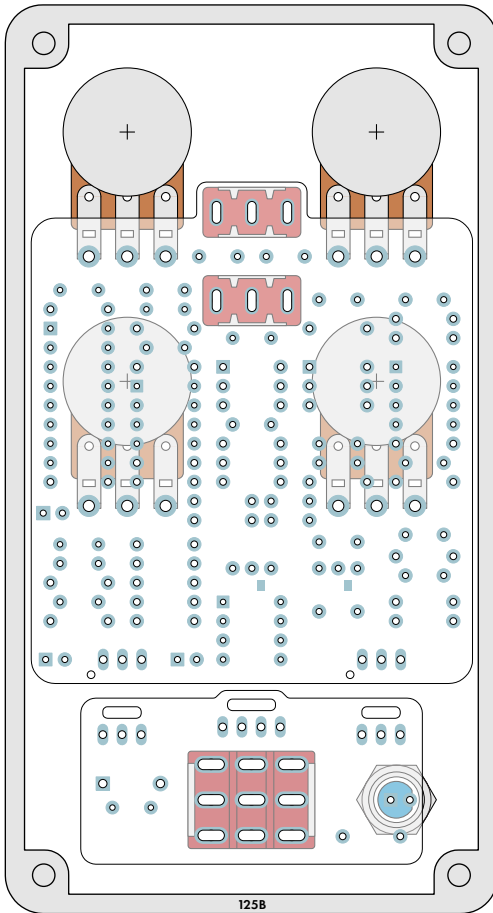

After all the components are affixed to the enclosure as shown on the previous page, place the main PCB on top of the potentiometers and toggle switches as in the diagram to the left.

You may need to adjust the position of the potentiometers and toggles slightly if they are not aligned straight.

Once all of the pins are through and the PCB is laying flat, solder each of the pins from the top, being careful not to touch any of the surrounding components with the soldering iron.

After you've finished soldering the pots, **clip the leads as close as you can to the main PCB**. This is important because the input/output PCB overlaps them and you need to avoid any of the components shorting. (You do not need to clip the lugs of the toggle switches.)

Next, do the same thing with the footswitch board—the 3PDT footswitch and the LED.

Before soldering, double-check to **make sure the flat side of the LED is facing to the right**, as shown in the diagram, and that the short leg is coming through the pad on the right. It won't work if it's turned the other way.

Why solder everything inside the enclosure before testing it?





“Rock it before you box it” is conventional wisdom in pedalbuilding, and you'll often hear it recommended that builders should test the circuit before putting everything inside the enclosure. However, Aion FX projects are designed to be extremely easy to remove from the enclosure for troubleshooting, with no desoldering required—so with these kits, it's actually much easier to “box it before you rock it”.

If you've read the documentation carefully and followed all the instructions, there's a good chance you will get it right the first time!

ENCLOSURE LAYOUT: INPUT/OUTPUT PCB


Affix the input/output PCB to the north-facing panel of the enclosure as shown.

Note the use of two mounting nuts on each of the jacks, one inside and one outside. The inner nut acts as a spacer to set the DC jack flush with the outside of the enclosure. The inner nuts should be threaded as far down as they can go.

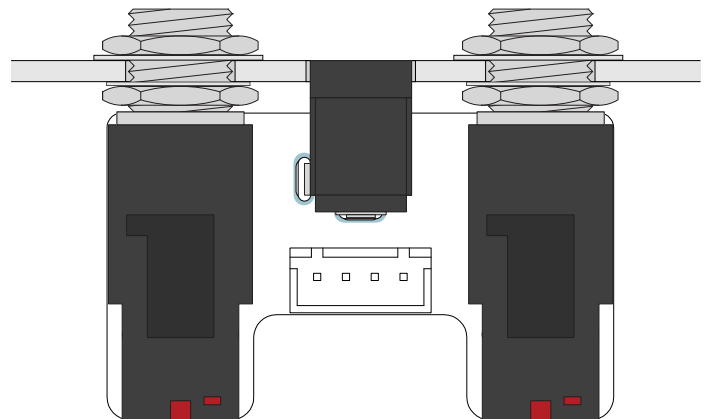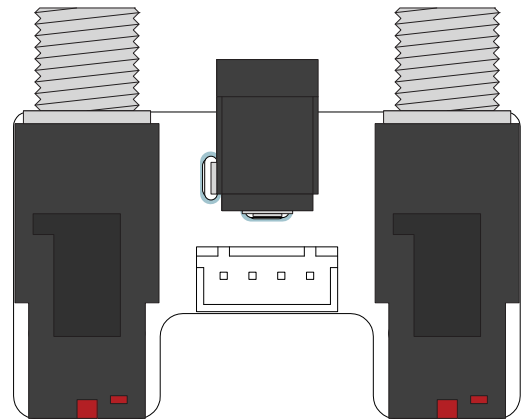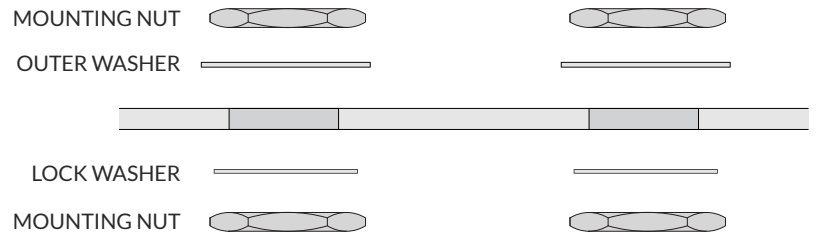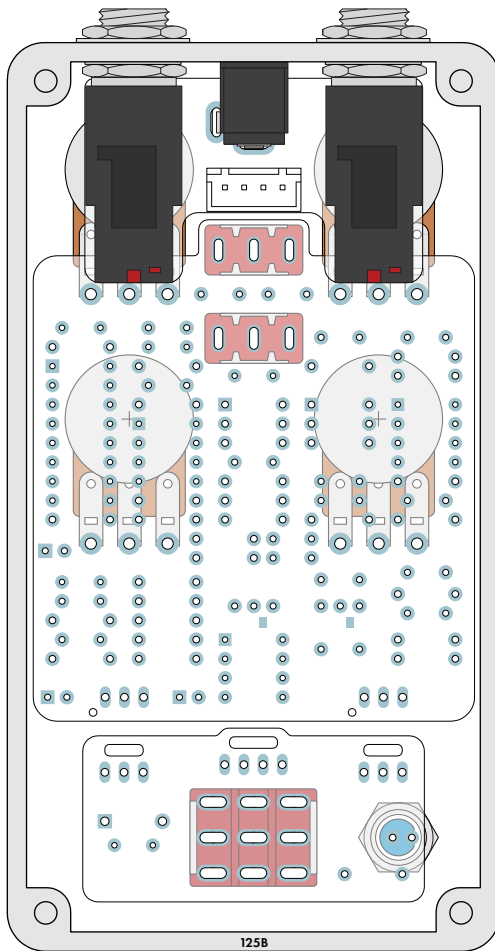

FINAL TESTING & ASSEMBLY

After everything is in place, just plug the 3 wire assemblies into their respective headers and make sure they're secure. Here is a cross-section of the inside of the completed pedal.

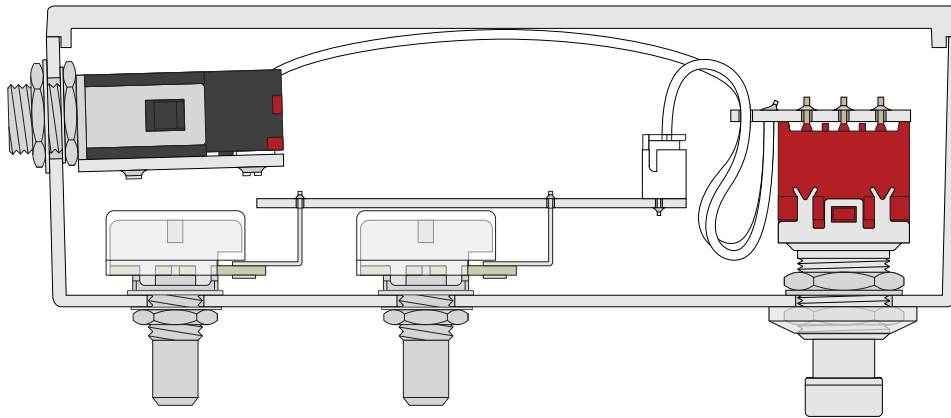

At this point, you have completed the full circuit as far as the electrons are concerned. Plug in a 9-volt supply and test it out with a guitar and an amplifier.


Test the bypass switch a few times, then start turning the knobs and see if everything sounds OK. If it works, great! If not, don't be discouraged. See page 26 for troubleshooting info.

Finishing touches

Now, just a couple of things for the final assembly. Turn the shafts all fully counter-clockwise, then put on the knob and rotate until the indicator line is aligned with the dot on the enclosure that shows the zero point. Affix the knobs to each of the potentiometer shafts as shown in the diagram below.

Using a small flat-head screwdriver (no more than 0.1" / 2.5mm in diameter), firmly tighten the set screw until it presses against the shaft of the potentiometer and holds the knob in place.

Be careful not to over-tighten or you may damage the set screw. But if it's not tight enough, the knob will be more likely to fall off or lose its alignment with the markings on the enclosure.

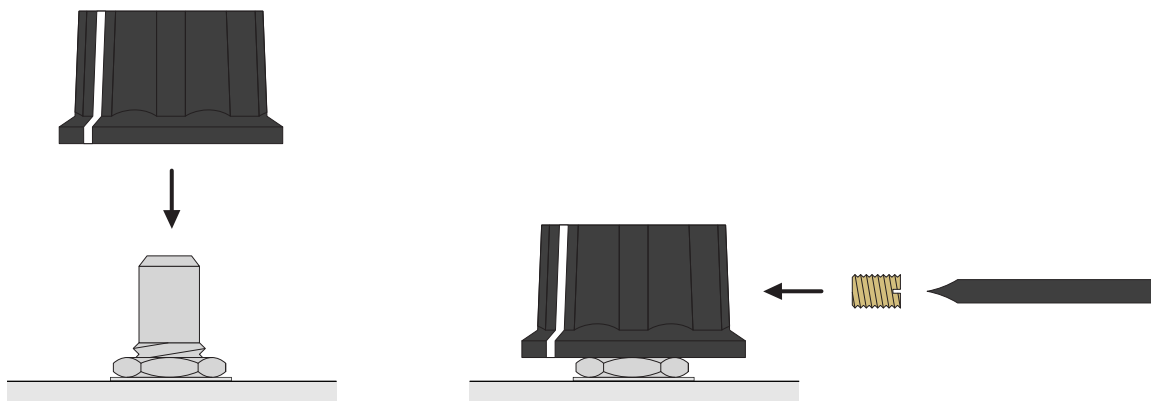

Last, just close the panel on the back using the four screws. That's it!

MAELSTROM BASS DRIVE



FULL PARTS LIST

Resistors

PART	VALUE
R1	10k
R2	1M
R3	100k
R4	1M
R5	3k3
R6	1M
R7	1M
R8	200k

PART	VALUE
R9	6k8
R10	22k
R11	470k
R12	470k
R13	1M
R14	330k
R15	3k3
R16	6k8

PART	VALUE
R17	470k
R18	10k
R19	1M
R20	100k
R21	33k
R22	10k
R23	22k
R24	22k

PART	VALUE
R25	47k
R26	1k
R27	100k
R28	10k
R29	10k
R30	100R
RPD	1M
LEDR	10k

Capacitors

PART	VALUE
C1	100n film
C2	1n film
C3	220n film
C4	22n film
C5	22n film
C6	22n film
C7	22n film
C8	220pF MLCC
C9	100n film

PART	VALUE
C10	22pF MLCC
C11	4n7 film
C12	22n film
C13	220n film
C14	22pF MLCC
C15	1uF film
C16	680pF MLCC
C17	22n film
C18	2n2 film

PART	VALUE
C19	2n2 film
C20	2n2 film
C21	1n film
C22	1uF film
C23	100uF electro
C24	47uF electro
C25	220uF electro
C26	100n MLCC

Diodes

PART	VALUE
D1	1N5817
D2	1N914
D3	1N914

ICs

PART	VALUE
IC1	TL072
IC2	TL072
IC3	CD4049UBE
IC4	TL072

Transistors

PART	VALUE
Q1	J201
Q2	J201

Potentiometers


PART	VALUE
Drive	100kC
Tone	100kB
Blend	100kB
Volume	100kA

Switches

PART	VALUE
SPDT on-off-on (2)	
3PDT stomp	


TROUBLESHOOTING INFORMATION

If you finish building the kit and find that it doesn't work right, we've written a separate in-depth [Troubleshooting Guide](#) that applies to all of our kits. The main troubleshooting process is covered there. Here you will find information specific to this kit that will help with that process.

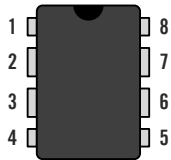

Voltages

The following voltages are taken from our prototype unit using a **9.60V** supply. Your measured voltages won't be exactly the same due to variance in power supplies and component tolerances. However, if you see anything more than +/-0.5V from the listed voltages, it's a good indicator of an issue, and the exact voltages can help narrow it down.

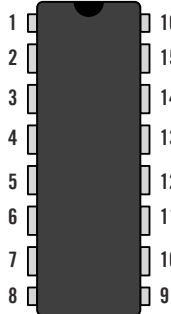

Note that IC pins are labeled counter-clockwise from the upper-left, as shown in the diagrams to the right.

IC1

PIN	VOLTAGE
1	4.63
2	4.64
3	4.20
4	0
5	4.64
6	4.64
7	4.64
8	9.32

IC2

PIN	VOLTAGE
1	4.64
2	4.64
3	4.20
4	0
5	4.64 (falling)
6	4.64
7	4.64
8	9.31

IC3

PIN	VOLTAGE
1	8.57
2	3.26
3	3.26
5	0
7	0
8	0
9	0
11	0
14	0

IC4

PIN	VOLTAGE
1	4.63
2	4.64
3	4.57
4	0
5	4.61
6	4.64
7	4.64
8	9.32

Q1

PIN	VOLTAGE
D	4.95
S	0.28
G	0

Q2

PIN	VOLTAGE
D	9.32
S	4.95
G	4.42

Note: The pins not listed for IC3 do not have any electrical connection to the rest of the circuit and do not need to be tested.

SUPPORT

Aion FX does not offer direct support for these projects beyond the provided documentation.

Replacements and refunds cannot be offered unless it can be shown that the circuit or documentation are in error or that the included components are non-functional.

Where to get help

The three best places to ask for help are the [DIY Stompboxes forum](#), the [DIY Stompboxes Facebook group](#), and the [r/diypedals subreddit](#). These communities have more than 150,000 members between them and they are very accommodating to new builders.

When posting a troubleshooting request, always include the following:

1. A thorough description of the problem you are experiencing
2. A photo of the inside of the pedal
3. A list of all the measured voltages of each of the pins, described on the previous page

While we cannot offer direct, private support, you may send a link to your public troubleshooting thread to Aion FX using the contact form on the website. There is no guarantee that we will be able to join the discussion and help solve your problem, but this improves the chances.

It benefits the whole community if the troubleshooting process is public because then people who have the same issue in the future may come across it when searching. And if you do get help, remember to pay it forward! The best way to learn new skills is to help others. Even if you've only built one pedal, you have more experience than someone who is brand new, so you have something to offer.

RESALE TERMS

These kits may be used for commercial endeavors in any quantity unless otherwise noted. It's okay to sell individual builds locally or online, or even to offer a service to build pedals based on these kits.

No direct attribution is necessary, though a link back is always greatly appreciated. The only usage restriction is that you cannot "goop" the PCB or otherwise obscure the source. In other words: you don't have to go out of your way to advertise the fact that you use Aion FX kits, but please don't go out of your way to hide it. The guitar effects industry needs more transparency, not less!

LEGAL INFORMATION

Darkglass® and Microtubes® are registered trademarks of Darkglass Electronics.

All other trademarks are property of their respective owners.

Any use of trademarks is for comparative advertising purposes only under fair use. It is not an endorsement of this product by the trademark holders.

These kits are intended to be built by the customer. Aion FX is not responsible for language that may be used by the customer in the marketing or resale of the finished product.

All content and graphics in this document are original works and are copyrighted by Aion FX and may not be used without permission.

DOCUMENT REVISIONS

1.0.3 (2024-09-11)

C24 reverted to 47uF.

1.0.2 (2024-08-08)

Added link to troubleshooting guide on page 26.

1.0.1 (2023-07-17)

Changed C24 to 100uF.

1.0.0 (2022-11-11)

Initial release.